

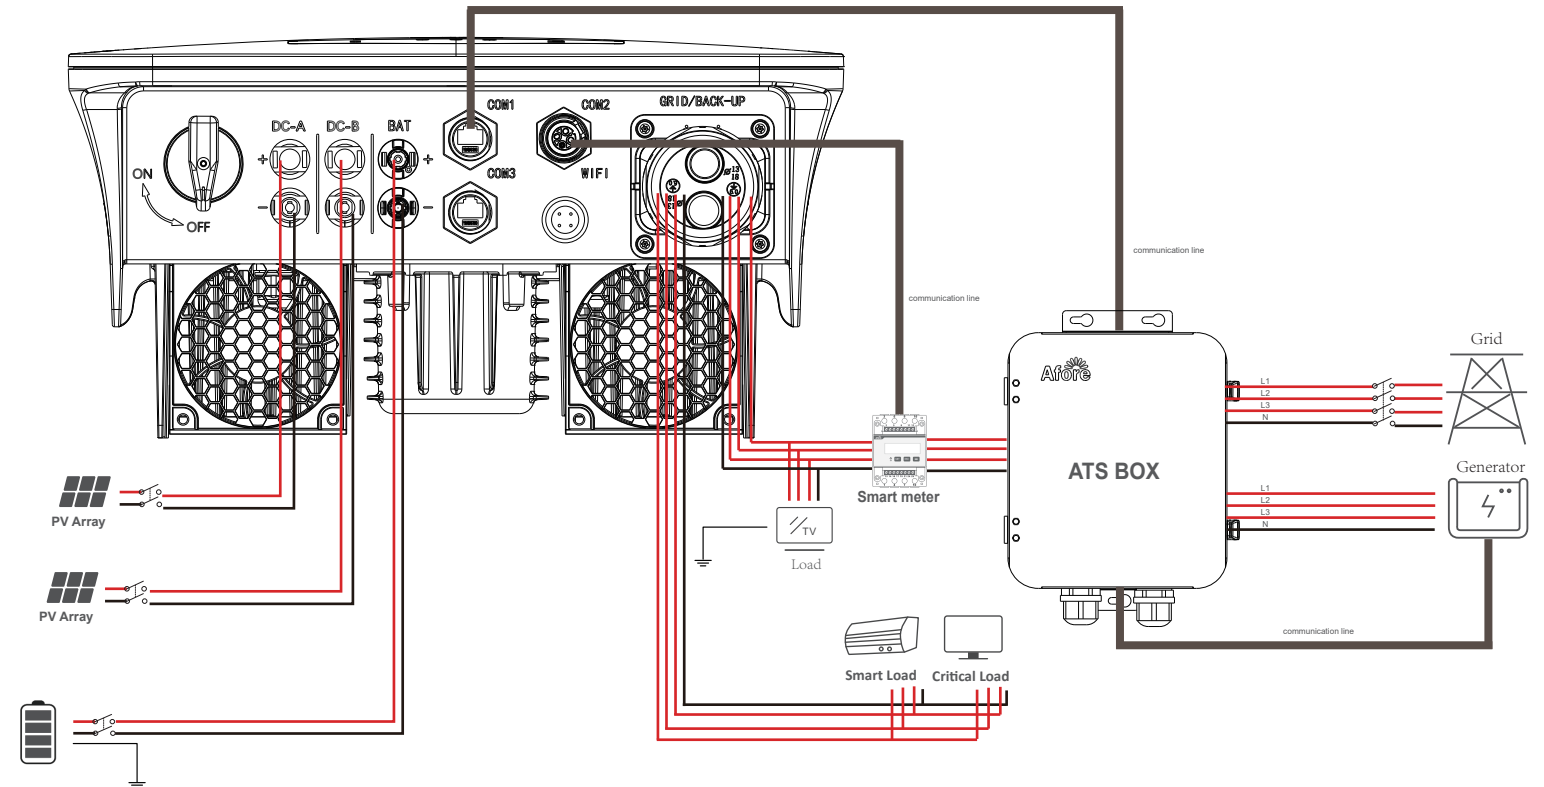


1. ATS SYSTEM CONNECTION

The figure below shows the assignment of the various connection areas of the distribution box.

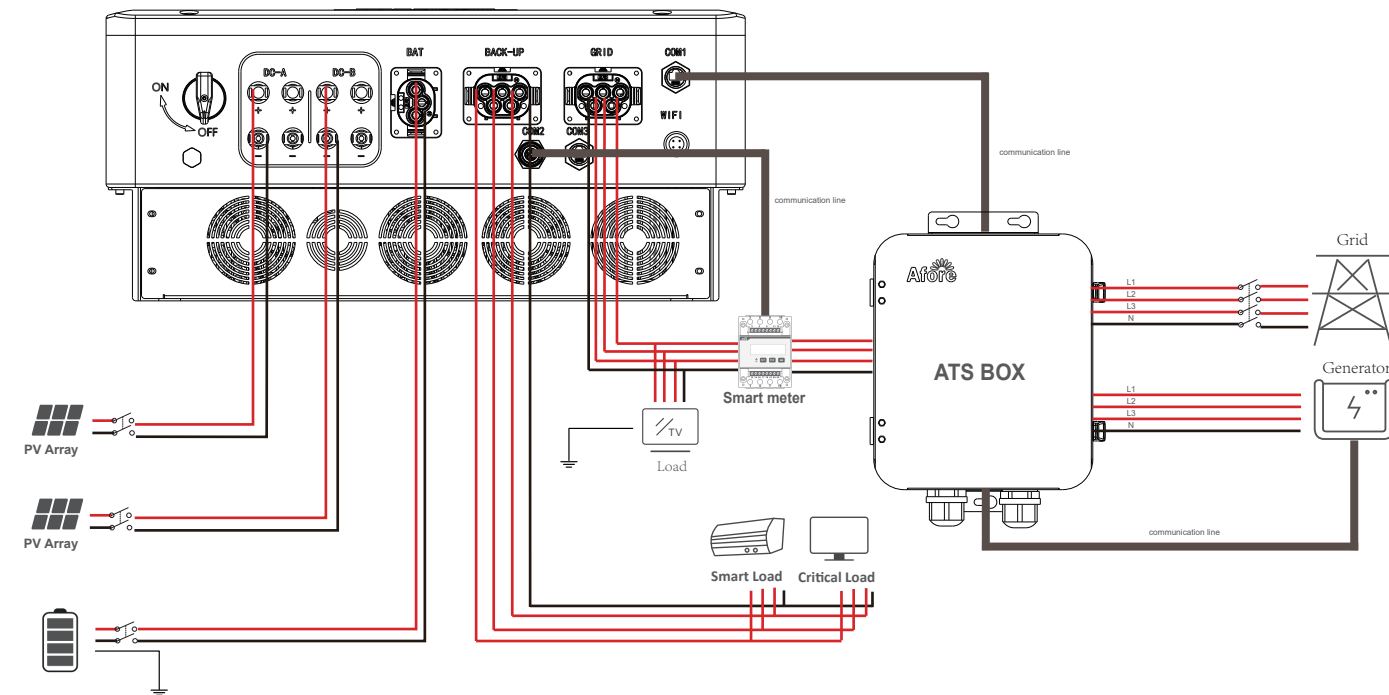

2. ATS WIRE CONNECTION

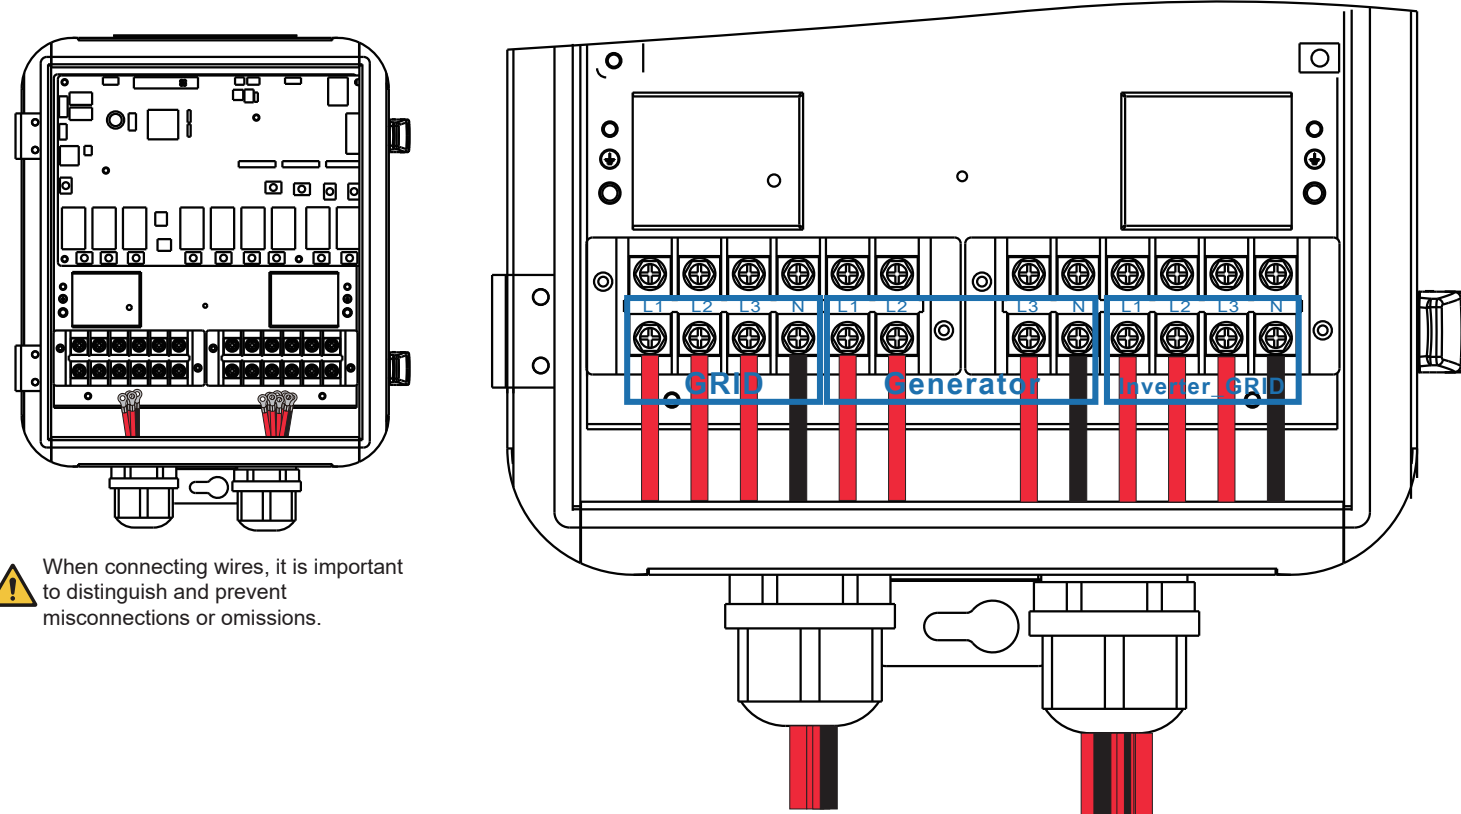

⚠ When connecting wires, it is important to distinguish and prevent misconnections or omissions.

3. ATS TO INVERTER

Connect the communication of the inverter and the starting terminal of the diesel generator.

