


Wall Mounted Energy Storage Battery

Installation and Operation Manual

www.aforeenergy.com

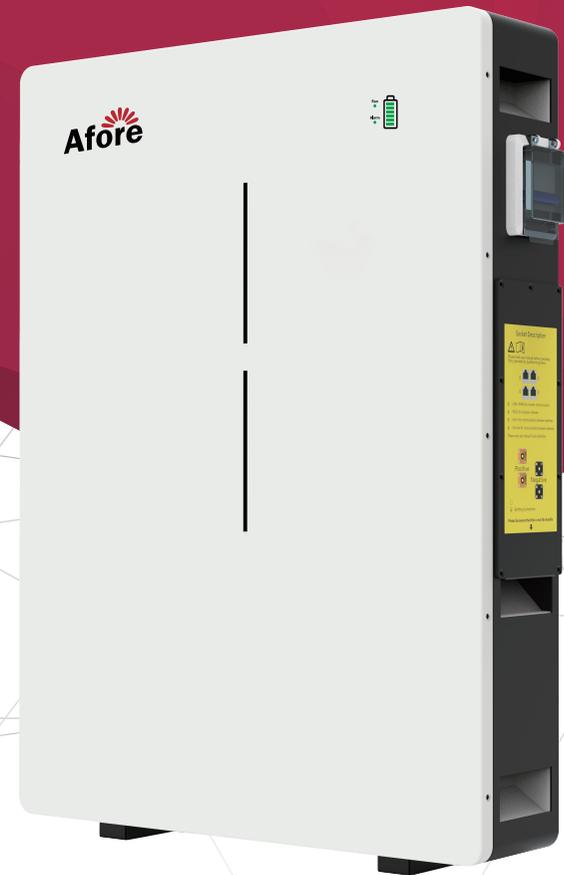

Afore


Afore New Energy Technology (Shanghai) Co., Ltd.

T +86-21-54326236 F +86-21-54326136 E info@aforeenergy.com

Ad Building 7, No.333 Wanfang Rd, Minhang District, Shanghai, China. 201112

Afore

Afore New Energy Technology (Shanghai) Co., Ltd.

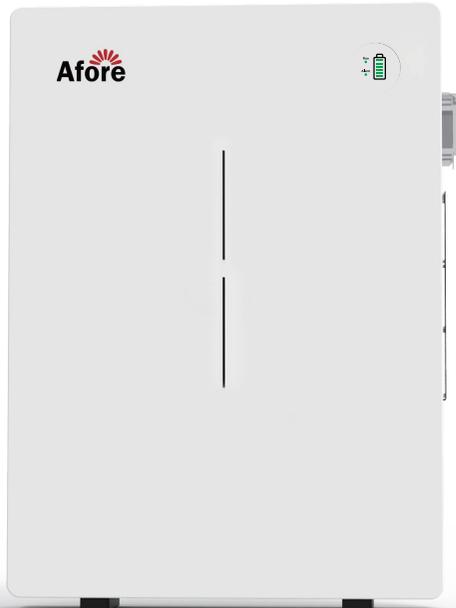

AF10000W-LG Operation Manual

CONTENTS

1	Technical Data	1-2
2	Product Overview	3
2.1	Brief Introduction	3
2.2	Interface Introduction	4
2.2.1	Switch ON/OFF	4-5
2.2.2	LED Indicator Definition	5-6
2.2.3	CAN/RS485 Port	6
2.2.4	RS232 Port	6
3	Installation Guide	7
3.1	Checking Before Installation	7
3.1.1	Checking Outer Packing Materials	7
3.1.2	Checking Deliverables	7-8
3.2	Tools	9
3.3	Installation requirements	9
3.3.1	Installation environment requirements	9
3.3.2	Installation carrier requirements	9
3.4	Installation Instructions	10
3.4.1	Dimensions	10
3.4.2	Installation Procedure	11-17
4	Maintenance	18
4.1	Recharge Requirements During Normal Storage	18
4.2	Recharge Requirements When Over Discharged	19

01

TECHNICAL DATA

NOTE

Operating current derating according to cell voltage and battery temperature.




Performance	
Nominal Voltage	51.2 Vdc
Nominal Capacity	200Ah
Battery Energy	10240 WH
Charge Voltage	56.16Vdc
Discharge Voltage	44.8Vdc
Nominal Charge / Discharge Current	100A
Nominal Charge/Discharge Power	5120W
Max Charge / Discharge Current	200A
Max Charge / Discharge Power	10240W
Short Circuit Current	540A/3mS
Communication	
Display	SOC status indicator, LED indicator
Communication	RS232, RS485, CAN
General Specification	
Dimension(WxDxHmm)	800x590x142 mm
Weight (Kg)	96.5kg
Installation	Floor stand or Wall mounted
Charging Temperature Range	0°C ~ 55°C
Discharge Temperature Range	-20°C ~ 60°C
Operating / Storage / humidity	≤95%RH
Max Operating Altitude	≤2000m
IP Rating	IP65
Cell Technology	LiFePO ₄ , Lithium Iron Phosphate
Cycle life	6000 Cycles @ 80% DOD / 25°C / 0.5C, 60% EOL
Scalability	Max 15 batteries in parallel
Standard Compliance	
Certification	IEC 62619; IEC 61000; UKCA; UL1973; UN38.3; MSDS

1. Test conditions: 100% depth of discharge (DoD), 0.2C rate charge & discharge at 25°C.
2. Charge/discharge derating occurs when the operating temperature from -10°C to 5°C & 45°C to 55°C.
3. Conditions apply, Refer to AF10000W-LG warranty Letter.

02

PRODUCT OVERVIEW

2.1 Brief Introduction

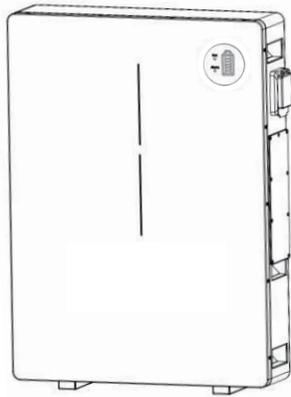


PRODUCT OVERVIEW

AF10000W-LG is a lithium battery with an operating voltage range between 45.6~56.16V. It is designed for residential energy storage applications and works together with a 48v battery hybrid inverter. **AF10000W-LG is not suitable for supporting life-sustaining medical devices.**

AF10000W-LG has built-in BMS (Battery Management System), which can manage and monitor cells information including voltage, current, and temperature. Besides that, BMS can balance cells charging to extend cycle life. BMS has protection functions including over-discharge, over-charge, over-current, and high/low temperature; the system can automatically manage charge state, discharge state, and balanced state.

Multiple AF10000W-LG can be connected in parallel to expand capacity and power, 15 AF10000W-LG can be connected in parallel at most.

2.2 Interface Introduction

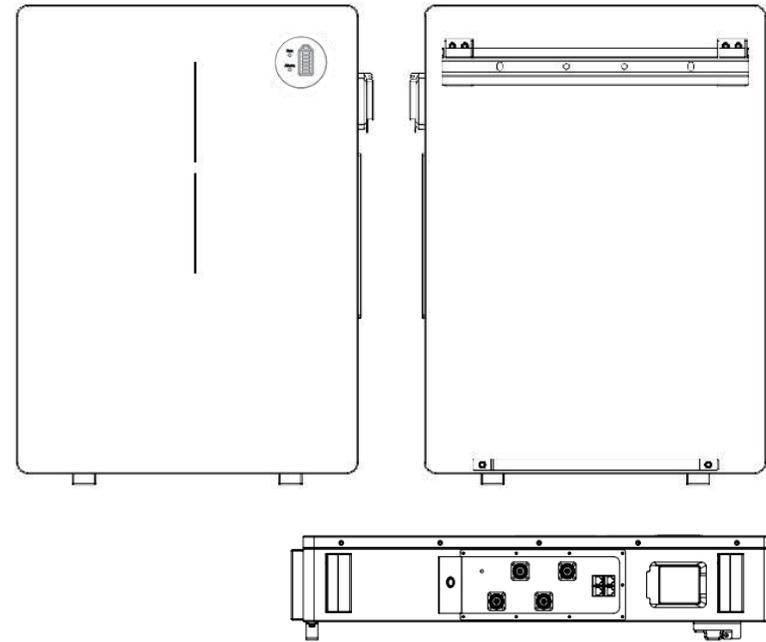

2.2.1 Switch ON/OFF

1. Switch ON

Turn on a single AF10000W-LG, turn on the air switch, then press the circular button (more than 3 seconds) on / off button, the LED flashes and the battery works normally. L1 to L6 display the battery SOC, L7/L8 to indicate the battery status.

For multiple AF10000W-LG in parallel, switch ON circular weak current switch on all batteries, long press (more than 3 seconds) ON/OFF button of MASTER battery, LED will flash. battery system will automatically encode and assign ID to each slave battery, then battery system will operate normally.

2. Switch OFF

Press the Circular weak current switch of the master pack for more than 3 seconds and then release the button. When all slave pack are closed, the master pack will be closed (sleep mode). For a single AF10000W-LG, turn off the Circular weak current switch. For multiple AF10000W-LG in parallel, turn off the Circular weak current switch on the main battery first. Then turn off the Circular weak current switch on all subordinate batteries


2.2.2 LED Indicator Definition

Note:

flash 1 - 0.25s light / 3.75s off

flash 2 - 0.5s light / 0.5s off

flash 3 - 0.5s light / 1.5s off

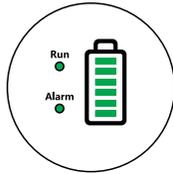

LED Indicators Instructions

Status	RUN	ALM	Battery Level Indicator							Descriptions	
	L8	L7	L6	L5	L4	L3	L2	L1			
Shutdown	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	All OFF	
Standby	Flash 1	OFF	According to the battery level							Indicates Standby	
Charging	Normal	Light	OFF	According to the battery level							The highest capacity indicator LED flashes (flash 2), others lighting
	Full Charged	Light	OFF	Light	Light	Light	Light	Light	Light	Light	Turn to standby status when charger off
	Protection	OFF	Light	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Stop charging
Discharge	Normal	Flash 3	OFF	According to the battery level							
	LVP	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Stop charging
		OFF	Light	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Stop discharging
Fault	OFF	Light	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Stop charging and Discharging	

Charging Battery Level Indicators Instructions

Status	Charging								
Battery Level Indicator	L8	L7	L6	L5	L4	L3	L2	L1	
Battery Level (%)	0 ~ 17%								Flash 2
	18 ~ 33%							Flash 2	Light
	34 ~ 50%	Light	OFF				Flash 2	Light	Light
	51 ~ 66%		OFF			Flash 2	Light	Light	Light
	67 ~ 83%		OFF		Flash 2	Light	Light	Light	Light
	84 ~ 100%	Flash 2	Light	Light	Light	Light	Light	Light	Light
	Full Charged	Light	Light	Light	Light	Light	Light	Light	Light

Discharging Battery Level Indicators Instructions

Status	Discharge								
Battery Level Indicator	L8	L7	L6	L5	L4	L3	L2	L1	
Battery Level (%)	0 ~ 17%			OFF	OFF	OFF	OFF	OFF	Light
	18 ~ 33%			OFF	OFF	OFF	OFF	Light	Light
	34 ~ 50%	Flash 3	OFF	OFF	OFF	OFF	Light	Light	Light
	51 ~ 66%		OFF	OFF	Light	Light	Light	Light	Light
	67 ~ 83%		OFF	Light	Light	Light	Light	Light	Light
	84 ~ 100%		Light						

2.2.3 CAN / RS485 Port

CAN / RS485 Communication Terminal (RJ45 port), connect to inverter, follow CAN / RS485 protocol.

PIN	Definition
Pin 1 、 Pin 8	RS485 - B (to PCS, reserved)
Pin 2 、 Pin 7	RS485 - A (to PCS, reserved)
Pin 3	NC
Pin 4	CANH (to PCS)
Pin 5	CANL (to PCS)
Pin 6	GND


2.2.4 RS232 Port

RS232 Communication Terminal (RJ45 port) follow RS232 protocol, for manufacturer or professional engineer to debug or service.


PIN	Definition
Pin 1 、 Pin 8	GND
Pin 2 、 Pin 7	RS232_TX
Pin 3 、 Pin 6	RS232_RX
Pin 4 、 Pin 5	NC

03

INSTALLATION GUIDE

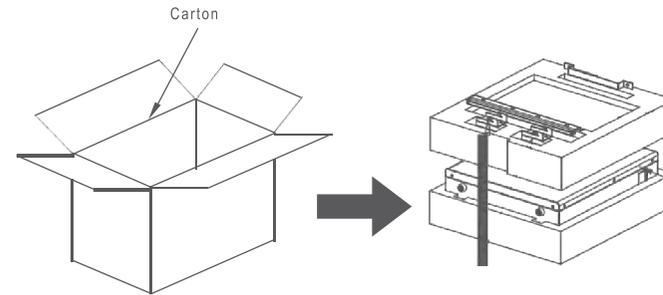

Installation flow chart

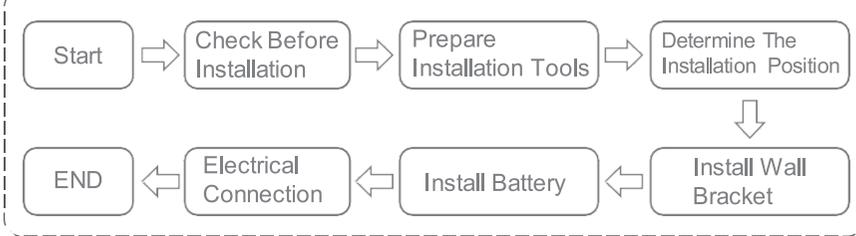

3.1 Checking Before Installation

3.1.1 Checking Outer Packing Materials

Packing materials and components may get damaged during transportation. Therefore, it is recommended to check the condition of outer packing materials before installing the battery. Check the surface of packing materials for any damage such as holes or cracks. If any damage is found, do not unpack the battery and contact the dealer immediately. It is advised to remove the packing materials within 24 hours before installing the battery.

3.1.2 Checking Deliverables

After unpacking the battery, check if all the deliverables are intact and complete. If any damage is found or any component is missing, please contact the dealer. The table below shows the components and mechanical parts that should be delivered

No.	Pictures of accessories	Quantit	Uses
1		1	Battery box
2		1	Wall mounting bracket
3		2	Hanging bracket
4		1	Bottom support bracket
5		1	Parallel terminals
6		1	Parallel terminals
7		1	Power Line
8		1	Connet cable

No.	Pictures of accessories	Quantit	Uses
9		4	Lock Wall Pendant
10		10	Ground screw
11		4	RJ45 Crystal head
12		2	Communication network cable
13		2	Desiccant
14		1	User manual
15		1	Outgoing Inspection Report

3.2 Tools

Tools			
Installation	Knife 	Measuring tape 	Socket wrench (10/16mm) 
	Rubber mallet 	Cross Screwdriver 	Hammer drill (10mm) 
Protection	ESD gloves 	Safety goggles 	Anti-dust respirator 
	Safety shoes 		

3.3 Installation requirements

3.3.1 Installation environment requirements


- Install the battery in the indoor environment.
- Place battery in secure location away from children and animals.
- Do not place the battery near any heat sources and avoid sparks.
- Do not expose the battery to moisture or liquids.
- Do not expose the battery to direct sunlight.

3.3.2 Installation carrier requirements


- Only mount battery on fire resistant building. Do not install batteries on flammable buildings.
- Battery is quite heavy, make sure the wall/ground can meet the load bearing requirements.

3.4 Installation Instructions

3.4.1 Dimensions

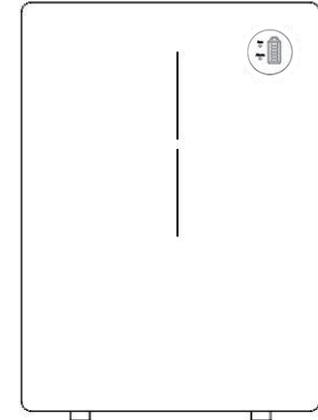


Minimum mounting distance between battery pack and equipment:

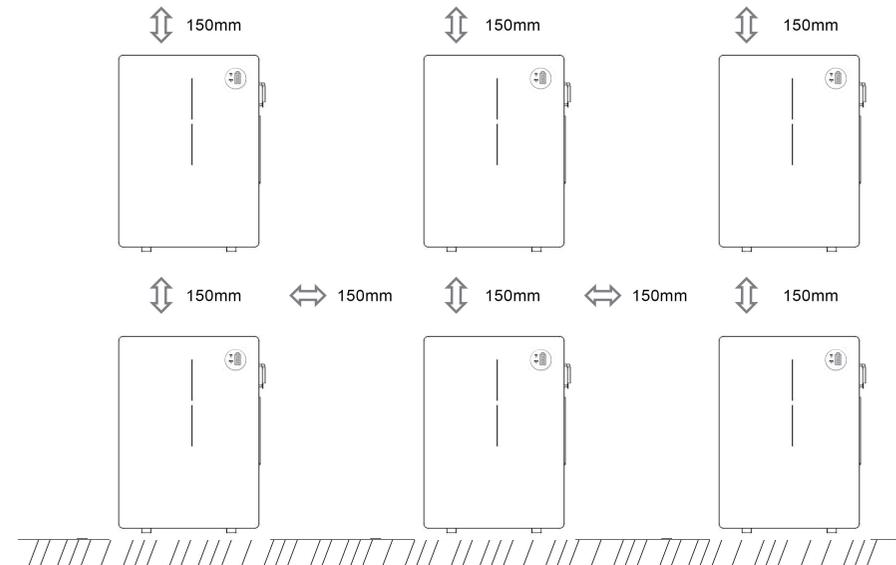

3.4.2 Installation Procedure


STEP 1

Drill a hole using a 10mm drill bit as shown below, and fix the wall bracket to the wall.

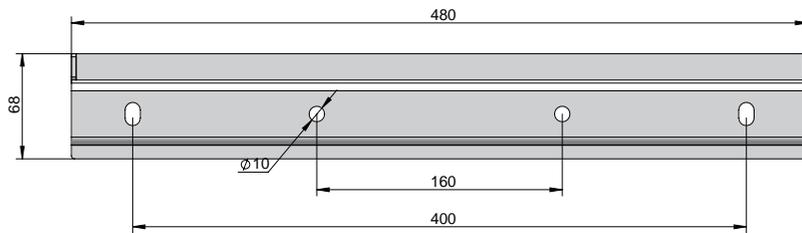


STEP 2

Install the hanging bracket.

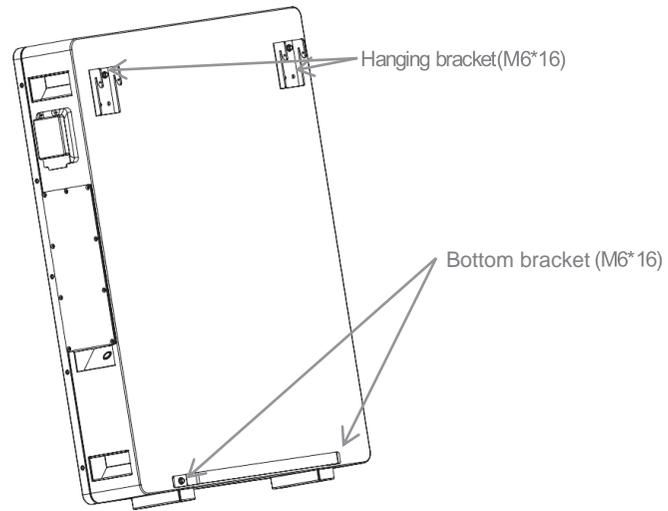


STEP 3

Hang AF10000W-LG on the wall bracket and tighten it.

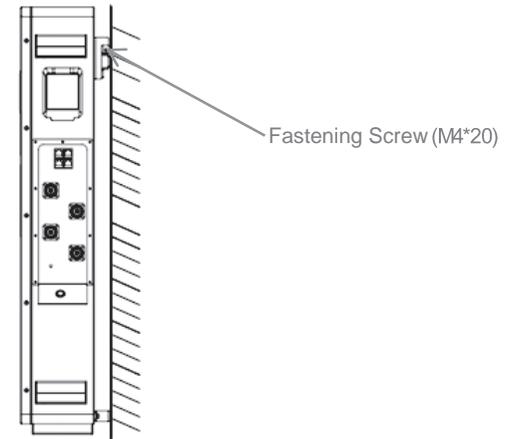


STEP 4

Connect to ground.

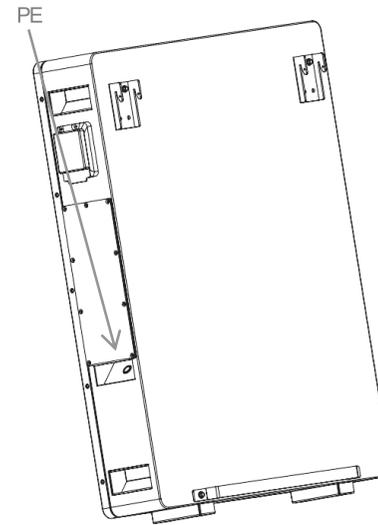


STEP 5

Connect power cable.

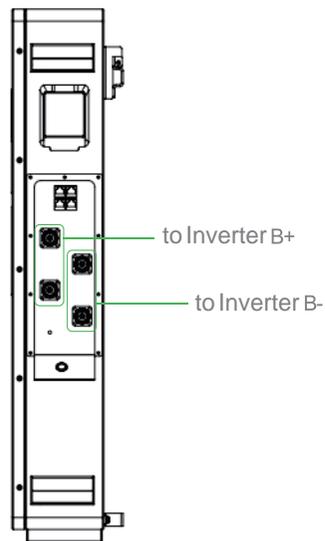

STEP 6

Connect communication cable.

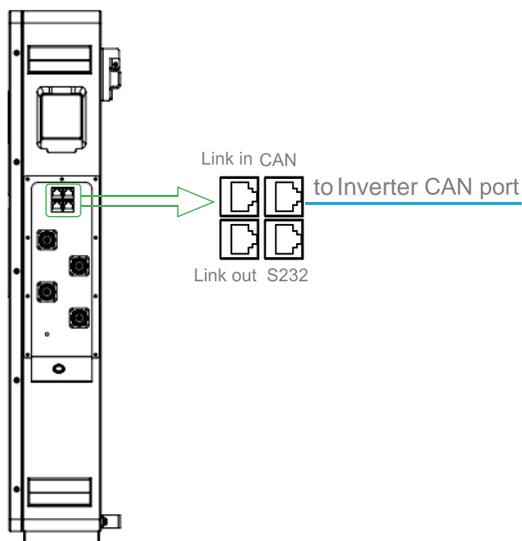


STEP 7

1. Load power exceeding 10kW requires at least 2 units Parallel operation.
2. The maximum number of Number of parallel machines is 15. The power of the inverter selected for the battery module must be less than the maximum output power of the battery module.


Parallel operation	Load power	Connection mode
1units	Below 10kW	7.1
2-15units	Below 10kW	7.2
2-15units	10-20kW	7.3/7.4
2-15units	20-70kW	7.5 Each additional units increases the battery power by 10kW.

 Danger	Ensure power cables are installed with the correct polarity. A dangerous situation may arise if the polarities are reversed.
 Danger	Do not create a short circuit between the positive and negative terminals of the battery. Ensure the polarity is correct during installation.
 Warning	Incorrect communication cable connection will cause the battery system to operate in unexpected ways which may lead to system failure.

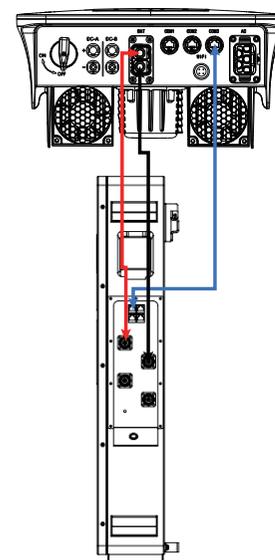


Cable connection in all the following views	
	Lithium battery positive power cable
	Lithium battery negative power cable
	Lithium battery communication cable

7.1	Warning
Wiring method of 1 units module with power below 10kW	

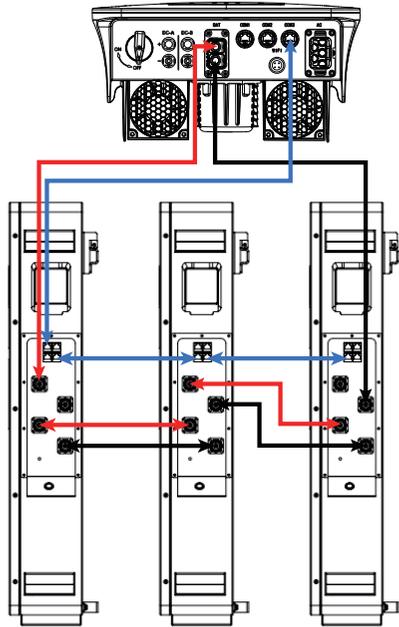

Warning

7.2 For 2 units -15 units is-layer module with power below 10kW.
 (The number of units in the middle of the diagram is omitted, the length of the two positive and negative poles connecting lines must be the same.)

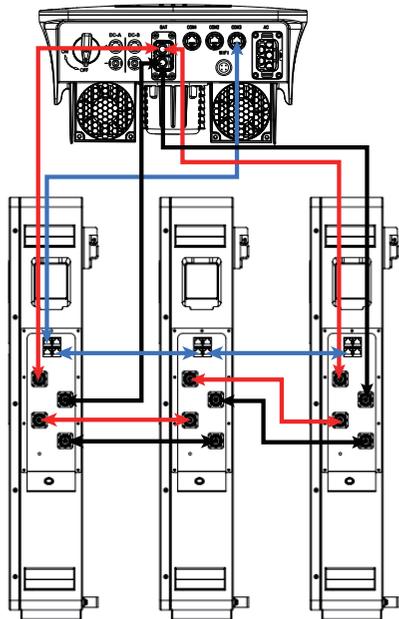


Warning

7.3 The wiring mode for the inverter with two battery input ports.
 For 2 units -15 units is 10KW - 20KW.
 (The number of units in the middle of the diagram is omitted, the length of the two positive and negative poles connecting lines must be the same.)

Warning


7.4 For the inverter with only one battery input port, the wiring method of the combiner box must be added.
 For 2 units -15 units is 10KW - 20KW.
 (The number of units in the middle of the diagram is omitted, the length of the two positive and negative poles connecting lines must be the same.)

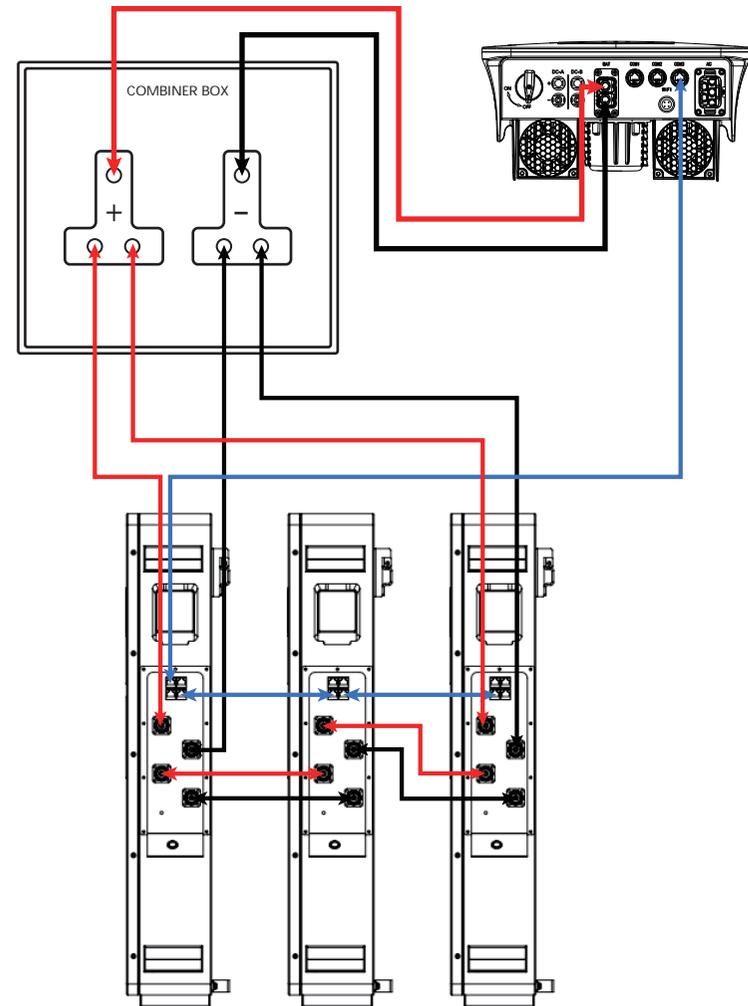

7.5

⚠ Warning

When using an inverter of 10kW or above, the positive and negative ports of each battery must be connected to the combiner cabinet in the wiring method shown in the figure below.
 For 2 units -15 units is 20KW - 70KW.
 (The number of units in the middle of the diagram is omitted, the length of the two positive and negative poles connecting lines must be the same.)

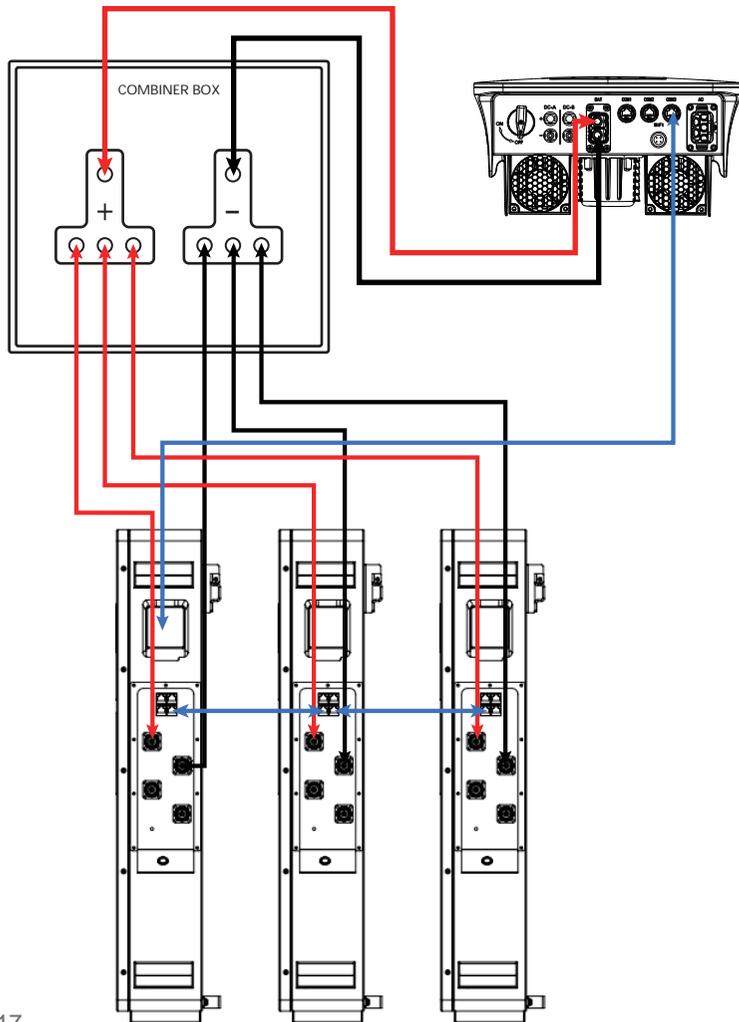

04

MAINTENANCE

4.1 Recharge Requirements During Normal Storage

The battery should be stored in an environment with a temperature range between -10°C to +45°C, and it should be regularly maintained according to the table below using a 0.5C (25A) current until it reaches 40% SOC after long storage time.

Recharge Conditions When In Storage

Storage Environment Temperature	Relative Humidity of Storage Environment	Storage Time	SOC
Below -10°C	/	prohibit	/
-10~25°C	5%~70%	≤12 months	30%≤SOC≤60%
25~35°C	5%~70%	≤6 months	30%≤SOC≤60%
35~45°C	5%~70%	≤3 months	30%≤SOC≤60%
Above 45°C	/	prohibit	/

4.2 Recharge Requirements When Over Discharged

If the battery has been over discharged (90% DOD), it should be recharged as per the following table; otherwise, the over discharged battery may get damaged.

Recharge conditions when battery is over discharged

Storage Environment Temperature	Storage Time	Note
-10~25°C	≤15 days	Battery Pack disconnected from to Inverter
25~35°C	≤7 days	
35~45°C	<12 hours	Battery Pack connected to Inverter